

REMOTE CONTROL CODING INSTRUCTIONS

Model: Gryphon Belt Drive Motor



Gryphon Garage Doors 1300 959 554


To Delete All Coding:

Press and hold CODE button until a C is indicated on the display.
All stored remotes will be deleted

Coding In:

Note: Hand transmitters that are supplied with the door opener are pre-programmed.

1. Press the CODE button. A dot will be indicated in the corner of the display.
2. Now press the button on the hand transmitter you want to use, and now press the same button again.

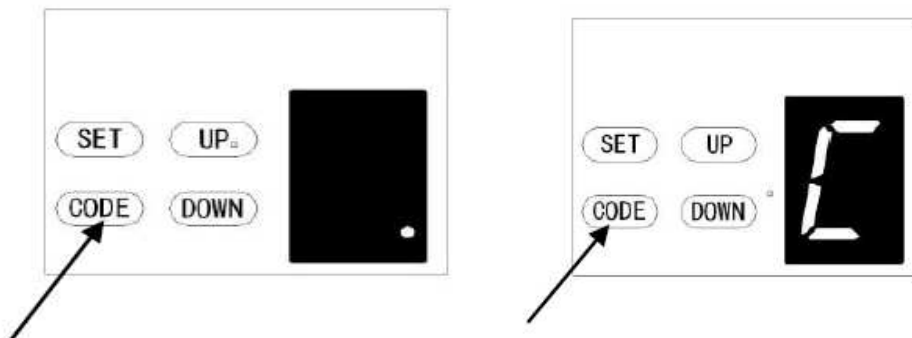

3. The dot on the display will flash to confirm the code, then turn off.
4. Re-peat the process for additional remotes that need to be stored.

Handset will now be coded in.

If you have any questions, please do not hesitate to contact the office.