

REMOTE CONTROL CODING INSTRUCTIONS

Model: Gryphon Superlift Belt Drive Motor



Gryphon Garage Doors 1300 959 554

To Delete All Coding:

Press and hold CODE button until for 8 seconds, DL will display on the LED screen indicating all transmitter codes have been deleted.

Coding In:

Note: Hand transmitters that are supplied with the door opener are pre-programmed.

1. Press the CODE button. SU will be displayed on the LED screen.
2. Now press the button on the hand transmitter you want to use, Press the same button on the transmitter a second time SU will flash on the LED screen.
3. Change to - - this indicates the transmitter code is now stored.
4. Re-peat the process for additional remotes that need to be stored.

Handset will now be coded in.

If you have any questions, please do not hesitate to contact the office.