

## Changing a TM60 Fuse

**IMPORTANT: - You must unplug the unit from the main supply before starting this procedure.**

### **Health & Safety**

**CAUTION: This procedure is to be carried out by a competent person only.**


Tools required. Long nosed pliers, a flat bladed and a Phillips type screwdriver.




1. Remove diffuser cover.



2. Remove bulb.

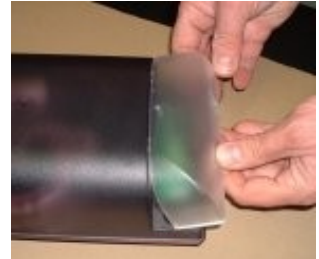

3. Remove rear cover.

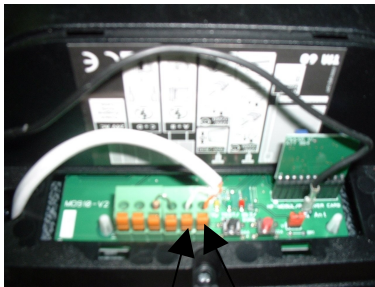


4 Remove bell wires from terminals A & B.



5. Remove retaining screws (x3).



6. Remove cover.

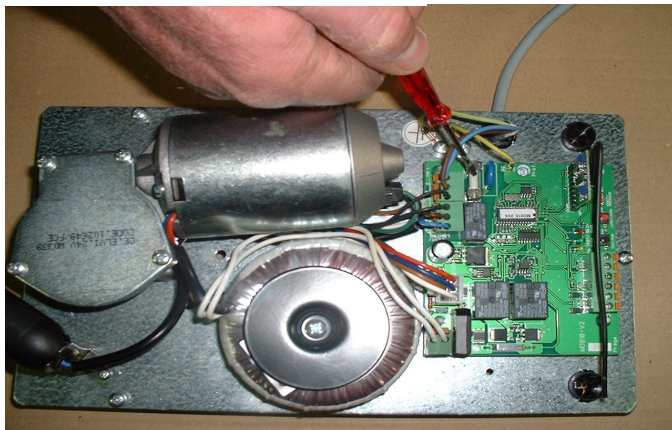

7. Remove fuse and replace with another 1.6 amp fuse.
8. Replace bell wires through cover and onto terminals A & B.
9. Replace lid and retaining screws.
10. Replace bulb and light diffuser cover.
11. Replace transparent PCB cover to rear of unit.
12. Restore power to unit.